

\*Photo may vary from actual product.



Part Number	MGMF132L1C8
Product	Servo Motor
Details	Middle inertia Low speed/High torque type, Connector type
Product name	MINAS A6 Family Servo Motor
Features	50 W to 22 kW, Input power supply for Driver: Voltage DC 24 V/48 V · AC 100 V/200 V/400 V, 23 bit Absolute/Incremental · battery-less Absolute/Incremental encoder, Frequency response 3.2 kHz

## **Spec Detail**

Item	Specifications		
Part Number	MGMF132L1C8		
Details	Middle inertia Low speed/High torque type, Connector type		
Family Name	MINAS A6		
Series	MGMF Series		
Туре	Middle inertia Low speed/High torque type		
Protection class	IP67		
About Enclosure	Except rotating portion of output shaft and connecting pin part of the motor connector and the encoder connector.		
Environmental Conditions	For more details, please refer to the instruction manual.		
Flange sq. dimension	130 mm sq.		
Flange sq. dimension (Unit:mm)	130		
Motor lead-out configuration	Connector		
Motor encoder connector	Motor connector: JL10, Encoder connector: Large size JL10		
About Motor encoder connector	Connector JL10 (Large size): Also applicable to screwed type		
Power supply capacity (kVA)	2.6		
Voltage specifications	200 V		
Rated output	1300 W		
Rated current (A (rms))	9.3		
Holding brake	without		
Mass (kg)	5.7		
Oil seal	with protective lip		
Shaft	Round		

- This datasheet is downloaded from Panasonic Automation Controls Website.
  Specifications and design of the products are subject to change without notice for the product improvement.
  For more detail of this product, please contact us or consult to the dealer from whom you have purchased this product.

Rated torque (N · m)	8.28		
Continuous stall torque (N · m)	8.28		
Momentary Max. peak torque (N · m)	23.3		
Max. current (A (o-p))	37		
Regenerative brake frequency (times/min)	Without option :No limit With option :No limit Option (External regenerative resistor) Part No.: DV0P4284		
About regenerative brake frequency	Please refer to the details of [Motor Specification Description] , Note: 1, and 2.		
Rated rotational speed (r/min)	1500		
Rated rotational Max. speed (r/min)	3000		
Moment of inertia of rotor ( x10 <sup>-4</sup> kg · m²)	9.16		
Recommended moment of inertia ratio of the load and the rotor	10 times or less		
About recommended moment of inertia ratio of the load and the rotor	Please refer to the details of [Motor Specification Description] ,Note: 3.		
Rotary encoder: specifications	23-bit Absolute/Incremental system		
Notice	When using a rotary encoder as an incremental system (not using multi-turn data), do not connect a battery for absolute encoder.		
Rotary encoder: Resolution	8388608		

#### Permissible load

ltem	Specifications
During assembly: Radial load P-direction (N)	980
During assembly: Thrust load A-direction (N)	588
During assembly: Thrust load B-direction (N)	686
During operation: Radial load P-direction (N)	686
During operation: Thrust load A, B-direction (N)	196
About permissible load	For details, refer to the [Motor Specification Description] "Permissible Load at Output Shaft".

A6 Family Motor Specification Description(PDF)

- This datasheet is downloaded from Panasonic Automation Controls Website.
  Specifications and design of the products are subject to change without notice for the product improvement.
  For more detail of this product, please contact us or consult to the dealer from whom you have purchased this product.


# **Applicable Driver**

Part Number	Series	Туре	I/F Classification of type	Frame	Supply voltage
MDDLN55NE	A6NE series	RTEX, Ultra high-speed Network (Basic type)	RTEX	D- Frame	Single/3- phase 200 V
MDDLN55SE	A6SE series	Position control type	Pulse train only	D- Frame	Single/3- phase 200 V
MDDLN55SG	A6SG series	RS485/RS232 Communication type	Pulse, Modbus (RS485 /RS232)	D- Frame	Single/3- phase 200 V
MDDLT55NF	A6NF series	RTEX, Ultra high-speed Network type (Multi type)	RTEX	D- Frame	Single/3- phase 200 V
MDDLT55SF	A6SF series	Multifunction type	Analog /Pulse, Modbus (RS485 /RS232)	D- Frame	Single/3- phase 200 V

#### A6 Family Table of Part Numbers and Options(PDF)

<sup>\*</sup> The A6SE-series (position control type) driver does not support absolute systems. It can only be used with incremental systems.


# **Torque charactristics**

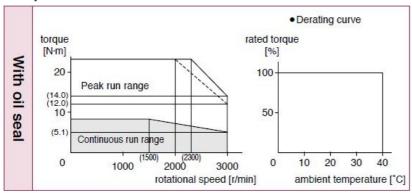

Dotted line represents the torque at 10 % less supply voltage.

- This datasheet is downloaded from Panasonic Automation Controls Website.
  Specifications and design of the products are subject to change without notice for the product improvement.
  For more detail of this product, please contact us or consult to the dealer from whom you have purchased this product.

### **Dimensions**

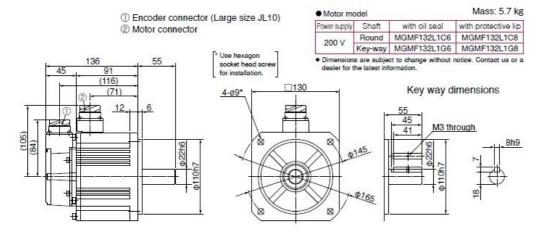

- This datasheet is downloaded from Panasonic Automation Controls Website.
  Specifications and design of the products are subject to change without notice for the product improvement.
  For more detail of this product, please contact us or consult to the dealer from whom you have purchased this product.

### Before Purchasing and Using the Products (Motors for FA & Industrial Application)

Specifications and design of the products displayed on this website are subject to change without notice for the product improvement. (including specification change, manufacturing location change, End Of Sales, End Of Life). Therefore, be sure to request and confirm in advance the most current specifications, which explain the specifications in detail, before the final stage of your design, purchasing or use for any application

#### Safety Precautions

- Important Notes on exporting this product or equipment containing this product;
- If the end-user or application of this product is related to military affairs or weapons, its export may be controlled by "Foreign Exchange and Foreign Trade Control Law" of Japan where export license will be required before product can be exported from Japan.
- This product is designed and manufactured for use in General Purpose Industrial Equipment and it is not intended to be used in equipment or system that may cause personal injury or death
- · All servicing such as installation, wiring, operation, maintenance and etc., should be performed by qualified personnel only.
- Tighten mounting screws with an adequate torque by taking into consideration strength of the screws and the characteristics of material to which the product will be mounted. Over tightening can damage the screw and/or material; under tightening can result in loosening.
- \*Example: apply 2.7 N·m 3.3 N·m torque when tightening steel screw (M5) to steel surface
- Install safety equipment to prevent serious accidents or loss that is expected in case of failure of this product
- Consult us before using this product under such special conditions and environments as nuclear energy control, aerospace, transportation, medical equipment, various safety equipments or equipments which require a lesser air contamination.
- We have been making the best effort to ensure the highest quality of our products, however, some applications with exceptionally large external noise disturbance and static electricity, or failure in input power, wiring and components may result in unexpected action. It is highly recommended that you make a fail-safe design and secure
- If the motor shaft is not electrically grounded, it may cause an electrolytic corrosion to the bearing, depending on the condition of the machine and its mounting environment, and may result in the bearing noise. Checking and verification by customer is required.
- Failure of this product depending on its content may generate smoke of about one cigarette. Take this into consideration when the application of the machine is clean room related
- Please be careful when using the product in an environment with high concentrations of sulfur or sulfuric gases, as sulfuration can lead to disconnection from the chip resistor or a poor contact connection
- Do not input a supply voltage which significantly exceeds the rated range to the power supply of this product. Failure to heed this caution may lead to damage of the internal parts, causing smoke and/or fire and other troubles.
- The user is responsible for matching between machine and components in terms of configuration, dimensions, life expectancy, characteristics, when installing the machine or changing specification of the machine. The user is also responsible for complying with applicable laws and regulations
- · Manufacturer's warranty will be invalid if the product has been used outside its stated specifications
- Component parts are subject to minor change to improve performance.
- Read and observe the instruction manual to ensure correct use of the product.

#### Warranty period

The warranty period is one year from the date of purchase or 18 months from the month of manufacture in our plant.

### Warranty information

- Should any defect develop during warranty period under standard service conditions as described in the manual, the company agrees to make repairs free of charge Even during warranty period, the company makes fee-based repair on product containing:
- [1] Failure or damage due to misuse, improper repair or alteration.
- [2] Failure or damage due to falling, or damage during transportation, after the original delivery
- [3] Defects resulting from neglect of the specification in use of the product.
- [4] Failure or damage due to unregulated voltage and fire, and act of natural disasters such as earthquake, lightning, wind, flood and salt pollution.
- [5] Defects resulting from invasion of foreign materials such as water, oil and metal pieces. Parts exceeding their standard lifetime specified in this document are excluded.
- •The company shall not be liable for any indirect, incidental or consequential damage or loss of any nature that may arise in connection with the product

- This datasheet is downloaded from Panasonic Automation Controls Website.
- Specifications and design of the products are subject to change without notice for the product improvement.

  For more detail of this product, please contact us or consult to the dealer from whom you have purchased this product.